



Wireless Under Cabinet

Bluetooth / CD / MP3-CD / USB / Radio / Music System

User's Guide for Model IKBC384SMP3U v2915-01

For the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Safety Instructions & Warnings



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.



WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. **This product meets and complies with required Federal product guidelines.**

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- **CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- This product is supplied with a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

Table of Contents

Setup	4
Includes	
Power	
Battery Backup	
Orientation	5
Front Panel Controls	
Device Inputs	
Remote	6
Remote Functions	
Remote Batteries	
Connecting Devices	7
USB Drive	
Programming the USB Drive	
USB Repeat Mode	
Line In (3.5mm Audio Input)	
Bluetooth Wireless	8
Pairing & Playing Audio	
Speakerphone	
CD Player	9
Loading and Playing a CD	
Programming a CD	
CD Repeat Mode	
FM Radio	10
Radio Reception	
Tuning the FM Radio	
Automatically Saving Radio Station Presets	
Manually Saving Radio Stations Presets	
Clock & Timer	11
Setting the Clock	
Using the Timer	
Company Information	12
Contact Information	
International Support	
Warranty	

 
Setup

Includes

- Remote control
- AC/DC power adapter
- Wall-mount hardware and instructions
- User's guide

Power


Connect the DC Power Adapter (included) into the DC Input on the under cabinet music system and a standard power outlet.

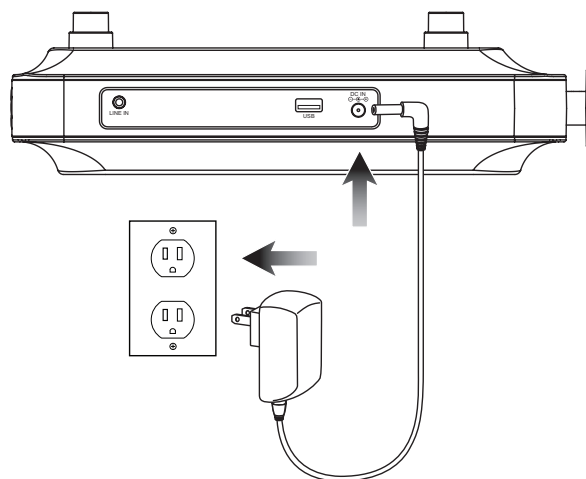

Battery Backup


Requires: 2 AA-size, batteries (not included).

 The battery backup is intended for short power outages only. The under cabinet music system's primary functions cannot run on the battery backup alone.

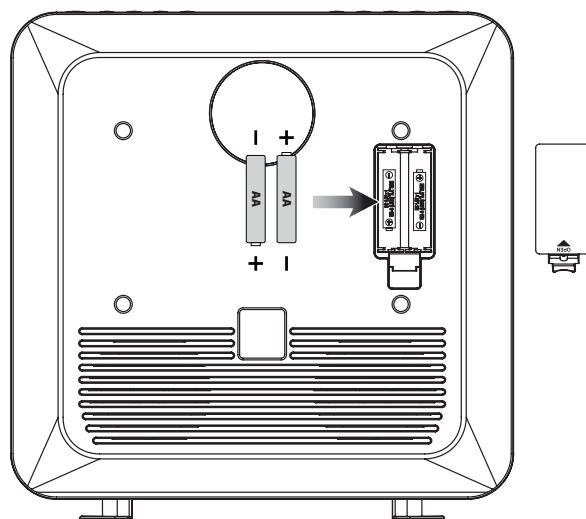


Orientation

 Front Panel Controls

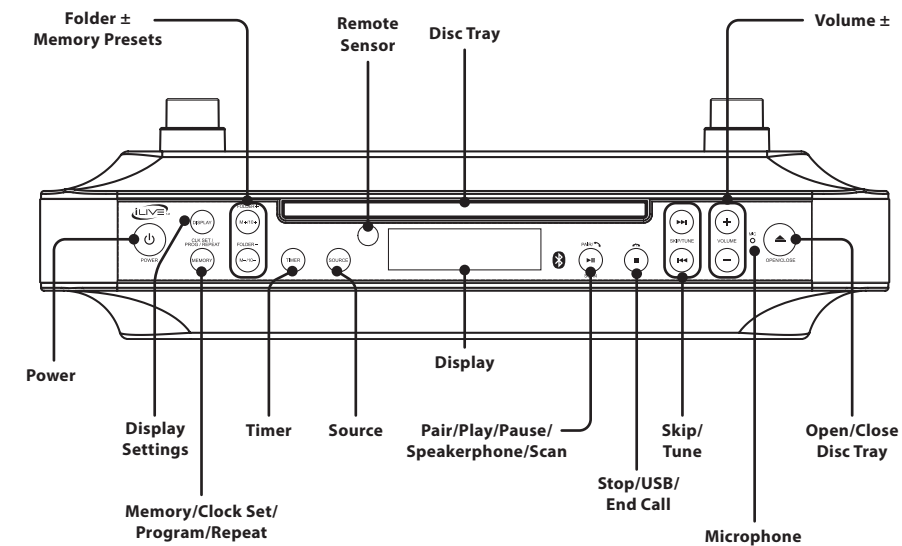


Device Inputs

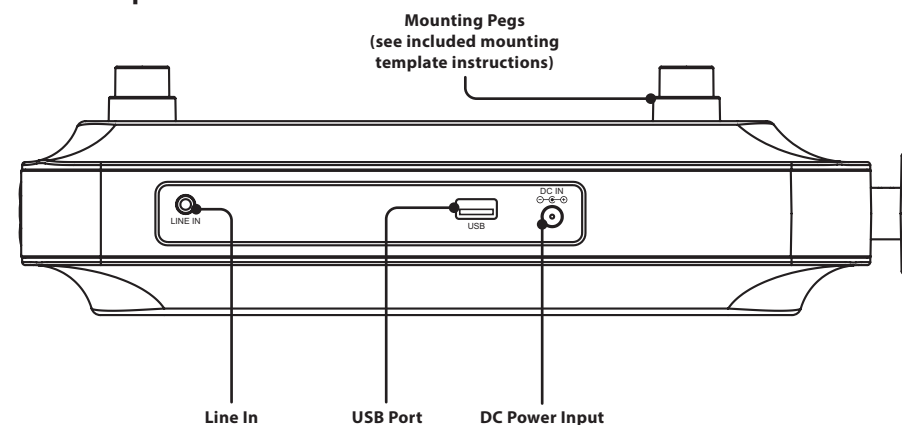 


Remote

 Remote Functions

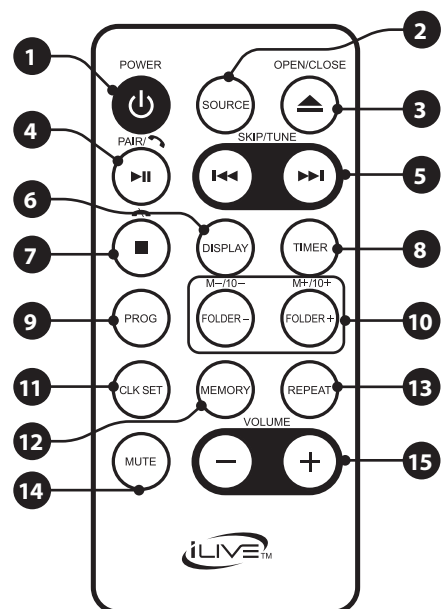

Remote Batteries

 
Requires 1 CR2025 button cell battery (included).

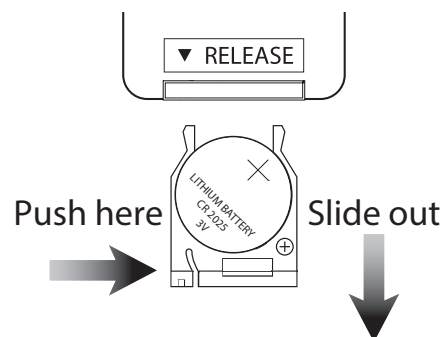

Connecting Devices

USB Drive

 1. Load a USB drive into the USB Port (**32GB maximum**).
2. Press the **Source** button to switch to **USB Mode**. The display will show the total number of tracks on the USB drive.
3. Press the **Play/Pause** button to begin playing. Use the controls on the remote or the under cabinet music system to pause, adjust volume, etc.

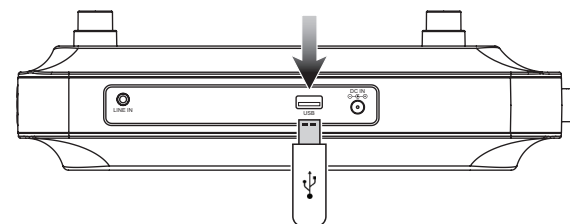

Programming the USB Drive

The unit can be programmed to up to 99 tracks in the order you wish.

1. Please make sure the unit is stopped and in USB mode.
2. Press the **Prog** button, the Prog indicator will flash and the display will show "P01."
3. Press the **Skip/Tune** buttons to select the desired audio tracks. Press the **Prog** button to confirm the selection.
4. The display will advance to "P02," repeat step 3, up to a maximum of 99 tracks. When the maximum of 99 tracks have been programmed the display will read "FUL" to indicate the program list is full.
5. When you have completed programming, press the **Play/Pause** button to begin the program. The tracks will now play in the designated order. In order to cancel the programming press the **Stop** button twice.

USB Repeat Mode

 
With the repeat feature you can choose to repeat one song, a folder or repeat all tracks.

1. To repeat a track press the **Repeat** button once. The display will show "↺ 1" indicating the unit will begin replaying the current track.
2. Press the **Repeat** button again to repeat a folder, the display will show "↺ FOLDER." **Note:** If there is no folder this function cannot be selected.
3. Press the **Repeat** button again to repeat all, the display will show "↺ ALL."
4. To cancel the repeat function, press the **Repeat** button until the repeat indicator on the display turns off.

Line In (3.5mm Audio Input)

Required: 3.5 mm audio input cable (not included).

1. Press the **Power** button to power on the under cabinet music system.
2. Connect a 3.5mm audio cable to the **Line In Input** on the side of the under cabinet music system and the **audio output/headphone jack** on an audio device.
3. Press the **Source** button to switch to **Line In Mode**.
4. Use the controls on the connected device to play your audio through the under cabinet music system.

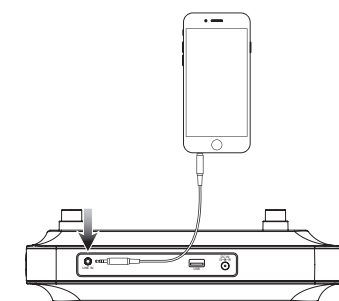

Bluetooth Wireless

Pairing & Playing Audio

1. Press the **Power** button to power on the under cabinet music system.
2. Press the **Source** button to select **Bluetooth Mode**. The  **pairing indicator** on the display will begin flashing.
3. On your Bluetooth device, scan for and select **IKBC384SMP3U** in your Bluetooth settings to pair. *If your device requests a password, enter the default password 0 0 0 0. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
When pairing, remain within 3 feet of the under cabinet music system.
4. When successfully paired, the voice prompt will say "Bluetooth connected." Use the controls on your connected device to select and begin playing audio.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, press and hold the  **button** to manually enter into pairing mode. A voice prompt will say "Bluetooth is connecting," you can then connect manually.

Speakerphone

1. When a call is received, a ringtone will sound from the speaker.
2. Press the  button to accept the call, or accept the call using the controls on the connected phone.
3. The incoming call received through the device will now be heard through the speaker.
4. To end the call, press the  button or end the call using the controls on the connected phone.

CD Player

Loading and Playing a CD

Note: This unit is compatible with MP3 CDs.

1. Press the **Power** button to power on the under cabinet music system.
2. Press the **Source** button to select **CD**.
3. Press the **Open/Close** button to open the Disc Tray and place a disc into the tray, label side facing up.
4. Press the **Open/Close** button to close the disc tray. The display will show the total number of tracks on the CD after a few seconds.
5. Press the **Play/Pause** button to start playing.
6. Use the controls on the remote or the under cabinet music system to pause, adjust volume, etc.

Programming a CD

Note: Please make sure the unit is stopped and in CD mode when trying to program.

1. While in CD mode, press the **Prog** button. The display will show "P01"
2. Use the **Skip/Tune** buttons to select the desired audio track. Press the **Prog** button to confirm selection.
3. The display will advance to "P02" repeat step 2 to program up to 20 tracks (99, if using a MP3 CD).
4. When the maximum number of tracks are programmed the display will read "FUL" to indicate the program list is full.
5. When you have completed programming, press the **Play/Pause** button to begin the program. Audio tracks will now play in the designated order.
6. To cancel a program, press the **Stop** button twice.

CD Repeat Mode

With the repeat feature you can choose to repeat one song, a folder or repeat all tracks.

1. To repeat a track press the **Repeat** button once. The display will show " 1" indicating the unit will begin replaying the current track.
2. Press the **Repeat** button again to repeat a folder, the display will show " **FOLDER.** " **Note:** If there is no folder this function cannot be selected.
3. Press the **Repeat** button again to repeat all, the display will show " **ALL.** "
4. To cancel the repeat function, press the **Repeat** button until the repeat indicator on the display turns off.

FM Radio

Radio Reception

An FM receiver is built into the under cabinet music system. To improve radio reception, adjust the position of the unit.

Tuning the FM Radio

1. Press the **Power** button to power on the under cabinet music system.
2. Press the **Source** button to switch to **FM Radio Mode**.
3. Press the **Skip/Tune** buttons to tune the radio manually. Press and hold the **Skip/Tune** button to scan for available stations.

Automatically Saving Radio Station Presets

1. Press the **Scan** button, the under cabinet music system will scan available FM radio frequencies and save them as a memory preset (P01, P02, etc.).
2. Once saved, press the **M +/-** buttons to cycle through preset radio stations.

Manually Saving Radio Stations Presets

1. Tune to the desired station.
2. Press the **Memory** button, the preset number will appear on the display (P01, P02, etc.).
3. Press the **M +/-** buttons to adjust to the desired preset number.
4. Press the **Memory** button to save the radio station to the preset.
5. Press the **M +/-** buttons to cycle through preset radio stations.

Clock & Timer

Setting the Clock

1. With the power off, press and hold the **Clk Set** button. The hour on the display will begin flashing.
2. Press the **Skip/Tune** buttons to set the hour.
3. Press the **Clk Set** button again, the minutes on the display will begin flashing.
4. Press the **Skip/Tune** buttons to set the minutes.
5. Press the **Clk Set** button to finish setting the time, or wait for the display to stop flashing.

Using the Timer

1. Press the **Timer** button to adjust the timer (180-0 min) in increments of 10.
2. Wait for the display to stop flashing. The **Timer** indicator will appear on the display and countdown the minutes.
3. After the set time has expired, the under cabinet music system will sound an alarm.
 - To cancel the alarm after it has sounded, press the **Power** button.
 - To cancel the timer before the alarm has sounded, press the **Timer** button until the display reads **00** and the timer light is no longer lit.

Company Information

Contact Information

Website: www.iLiveElectronics.com

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to:

www.iLiveElectronics.com

International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com



***Protect for Today
Sustain for Tomorrow***

Copyright © 2018 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.
