
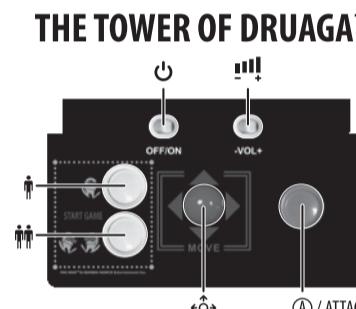
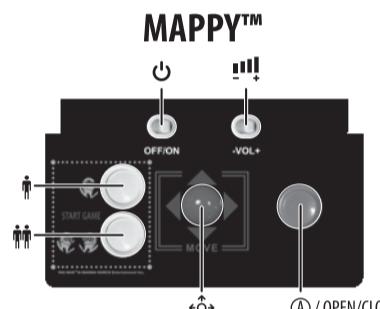
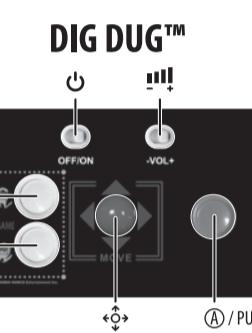


ENGLISH

GAME CONTROLS

*ARCADE MAY TAKE 10-15 SECONDS TO POWER ON AFTER SWITCHING ON

- MOVE JOYSTICK TO SCROLL THROUGH GAME LIST
- PRESS THE A BUTTON TO CHOOSE GAME
- FOLLOW GAME CONTROLS BELOW FOR EACH GAME
- HOLD PLAYER 1 (5 SECONDS) TO RETURN TO MENU AND TO SAVE A HIGH SCORE
- HOLD PLAYER 2 (5 SECONDS) TO RESET GAME

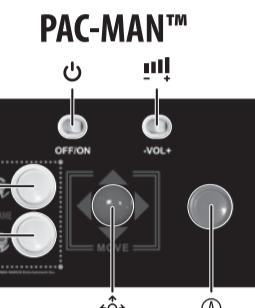

CAUTION

Servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

ARCADE1UP



ENGLISH

WARNING

READ BEFORE USING THE Arcade1UP

SAFETY PRECAUTIONS

The following symbols are used in labels on the game to draw attention to potentially hazardous situations:

WARNING : Failure to avoid the risk may result in death or serious injury

Electrical Shock Hazard. Disconnect power before removing cover.

Should only be done by a qualified technician.

WARNING : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- Please read and comprehend all warnings stated in this manual.
- Do not get arcade wet when cleaning.
- Parents and guardians: Please read entire manual before allowing gamer to play.
- The AC/DC adapter and apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on apparatus.
- The AC/DC adapter is used as disconnect device.
- The AC/DC adapter of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the AC/DC adapter of apparatus shall be disconnected from the mains.
- If appliance is provided with protective earth terminal, it should be connected to main outlet with a protective earth connection.
- Minimum distance 10 cm / 3.94 inches around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- Naked flame sources such as lighted candles should be placed on the apparatus.
- The apparatus should only be used in moderate climates.

WARNING THE EPILEPSY

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. To reduce the risk of such a seizure incident, it is recommended to take a 10-15 minute break at each hour of playing.

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Set up Arcade1UP on a level surface.
- Never allow children to climb or hang on product.
- MAKE SURE TO LOCATE YOUR ARCADE1UP ON A FLAT SURFACE

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

ENGLISH

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Game will not turn on.	-Power cord is not plugged into the wall outlet and there is power to that outlet. (Plug other electrical equipment into the power outlet to make sure the outlet normally works.) -Wires/Plugs may have come loose during shipping. -ON/OFF Switch is in the OFF position. -Slide switch on back of monitor is in the OFF position.	-Make sure power cord is plugged into the wall outlet and there is power to that outlet. (Plug other electrical equipment into the power outlet to make sure the outlet normally works.) -Unplug the arcade and open up the access panel on the back of the unit to make sure that no plugs are loose. -If loose or disconnected, replug the Wires/Plugs and close the access panel. -Slide Volume Switch located on control deck to the ON position. -Slide Headphone switch on back of monitor to the ON position.
Game will turn ON, but there is no sound.	-Wires/Plugs may have come loose during shipping. -Volume Switch is in the OFF position.	-Unplug the arcade and open up the access panel on the back of the unit to make sure that no plugs are loose. -If loose or disconnected, replug the Wires/Plugs and close the access panel.
You hear sound but there is no picture.	-Wires/Plugs may have come loose during shipping.	-Unplug the arcade and open up the access panel on the back of the unit to make sure that no plugs are loose. -If loose or disconnected, replug the Wires/Plugs and close the access panel.
The game screen is frozen.	-The game encountered a problem when processing the data.	-Turn the ON/OFF switch OFF and then back ON again. -You may need to RESET the game. Turn the ON/OFF switch to the OFF position. Unplug the game from the wall outlet and wait 60 seconds to RESET the game. Plug the game back in and turn the ON/OFF switch back to ON.
The game screen looks pixelated / Murky or there are lines running through the image.	-Wires/Plugs may have come loose during shipping. -Pixel Smoothing may be turned ON/OFF in the settings menu.	-Unplug the arcade and open up the access panel on the back of the unit to make sure that no plugs are loose. -If loose or disconnected, replug the Wires/Plugs and close the access panel. -Enter the settings menu to see if Pixel Smoothing is turned ON/OFF. -You may need to RESET the game. Turn the ON/OFF switch to the OFF position. Unplug the game from the wall outlet and wait 60 seconds to RESET the game. Plug the game back in and turn the ON/OFF switch back to ON.
One of the buttons on the control deck is stuck in the down position.	-Debris may have gotten between the button and the button housing.	-Take something thin (like a business card) and slide it between the button and the button housing and slide it back and forth to loosen the debris.
You are not able to scroll through the games on the game selection menu.	-You may be using the wrong joystick or pressing the incorrect buttons to scroll through the games.	-Look at the game control section in the instruction manual to make sure you are using the correct joystick or pressing the correct buttons to scroll through the game selection menu.
You are not able to scroll through the games on the game selection menu, but you can't enter a game to begin playing.	-You may be pressing the wrong button to enter the game.	-Look at the game control section in the instruction manual to make sure you are pressing the correct button to enter the game.
You have entered the game, but you can't get the game to start.	-You may be pressing the wrong button to start the game.	-Look at the game control section in the instruction manual to make sure you are pressing the correct button to start the game.
You have entered the game, but you can't exit the game to get back to game selection menu.	-You may be pressing the wrong button to exit the game. -You may not be holding down the exit button long enough.	-Look at the game control section in the instruction manual to make sure you are pressing the correct button to exit the game. -Make sure you are holding the exit button down for 5 seconds to exit the game.
The control functions that are printed on the control deck do not match the gameplay on the screen for the game you are playing.	-You may be pressing the wrong game control buttons for the game you are playing.	-Look at the game control section in the instruction manual to make sure you are pressing the same game control buttons for that game. -Look at the game control loading screen on the monitor to make sure you are pressing the correct control buttons. (NOTE: The game controls that are printed on the control deck are only for the feature cabinet game. The other games in the cabinet will utilize the same buttons but react differently.)
The game will not let me select 2 or 3 players for a chosen game.	-The game may only be a 1 or 2 player game.	-Refer to the game control section in the instruction manual to see how many players are able to play that game.



MADE IN CHINA

Colors, style and decoration may vary.

ENGLISH



PAC-MAN™ ©1980 BANDAI NAMCO Entertainment Inc.

PAC & PAL™ ©1983 BANDAI NAMCO Entertainment Inc.

MAPPY™ ©1983 BANDAI NAMCO Entertainment Inc.

DIG DUG™ ©1982 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA™ ©1984 BANDAI NAMCO Entertainment Inc.

THE TOWER OF DRUAGA