



POWER PRO 1500-WATT BLENDER

MM19503-BRN / MM19503-BLU



INSTRUCTION MANUAL

Read this booklet thoroughly before using
and save for future reference.

IMPORTANT SAFEGUARDS

When using the electrical appliance, follow these basic safety precautions:

WARNING:

- (1) The blade is very sharp. Handle it carefully when cleaning.
 - (2) Do not use abrasive cleaners and never immerse the Motor Unit in water for cleaning.
1. Read all instructions carefully.
 2. Before use, check that the voltage power corresponds to the one shown on the appliance nameplate.
 3. Do not let the cord hang over the edge of a table or counter.
 4. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
 5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
 6. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling, or cleaning.
 7. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
 8. Avoid contacting moving parts.
 9. Do not leave foreign objects, such as spoons, forks, knives, or the measuring cup, in the jar as this will damage the blades and other components when starting the machine and may cause injury.

10. Care should be taken when handling sharp cutting blades, emptying the bowl, and during cleaning.
11. The use of attachments, including the jar and jar lid, not recommended, or sold by the manufacturer may cause fire, electric shock, or injury.
12. Never run the appliance empty.
13. Be careful when emptying hot soup into the jar.
14. To protect against the risk of electrical shock, do not put the motor unit or power cord in water or other liquid.
15. Keep hands and utensils out of the jar while blending to reduce the risk of severe injury to persons or damage to the blender.
16. If scraping is necessary, turn the power OFF, unplug from the electrical outlet, and use a rubber spatula only.
17. Always operate the blender with the lid in place.
18. Never put non-food items into the jar for blending.
19. Do not open the lid before the blade stops running completely to avoid hazard.
20. Do not put hands or other objects into the jar during operation.
21. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
22. Children should not play with the appliance.
23. Misuse may cause potential injury.
24. Do not use the appliance outdoors.

25. Do not fill the bowl above the marked maximum fill line (or rated capacity) to avoid risk of injury due to damage to the cover or bowl.

26. Do not let cord contact hot surface, including the stove.


27. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY


Please note the following information regarding the cord plug:

This appliance has a polarized plug intended to fit into a polarized outlet only one way. To reduce the risk of electric shock, make sure the plug is inserted fully into the outlet. If the plug does not fit into the outlet, reverse it. If it still doesn't fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

KNOW YOUR BLENDER

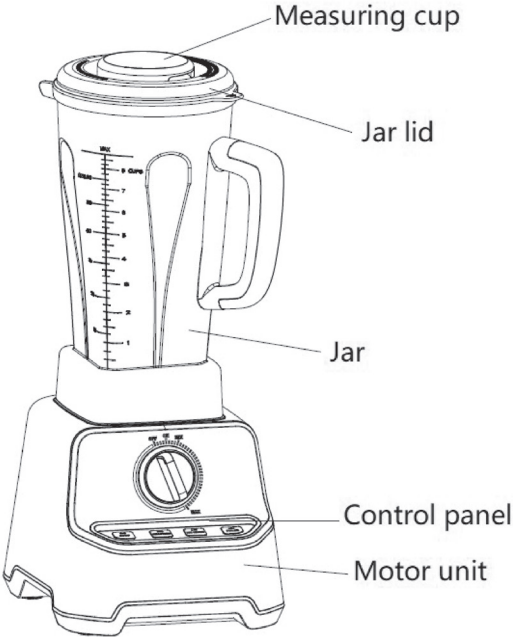

CONTROL PANEL

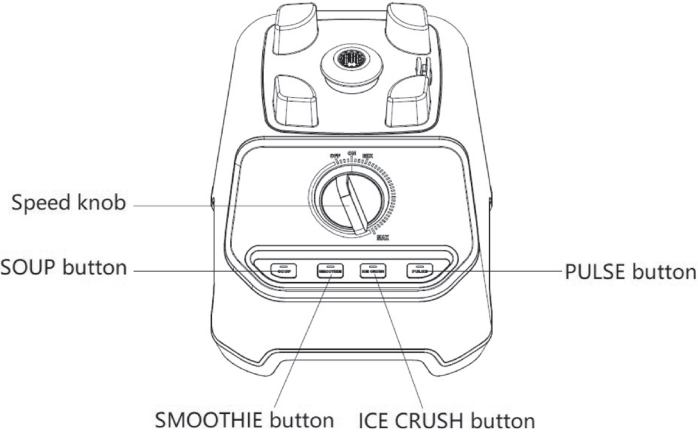

FOR INITIAL USE

1. Unpack the appliance and place all parts on a flat, horizontal surface.

2. Immerse the jar, jar lid and measuring cup in warm soapy water, then rinse and dry them. Never immerse the motor unit in water for cleaning to prevent the risk of electric shock.
CAUTION: The blade is very sharp, so handle it carefully.

OPERATION

SOUP

- 1. Place the appliance on a flat, horizontal surface and ensure it is unplugged with the "Speed Knob" turned to the "OFF" position before operating.
- 2. Put the suggested ingredients for the recipe into the jar. Ensure that the amount of ingredient mixture does not exceed 1 liter.

Recipe	Ingredient
Tomato Soup	Tomato: 26.46 oz Red chili: 4.76 oz Cashew nut: 3.17 oz Basil leaves: 6 pcs Salt: 0.035 oz Pepper: 0.018 oz

INSTRUCTIONS FOR SOUP

CAUTION: The amount of ingredient mixture should not exceed 1 liter, or the soup may overflow.

- 1. Close the jar lid and measuring cup tightly in position. The jar lid must be closed securely, or the appliance will not activate.
- 2. Install the jar onto the jar base and ensure that it is correctly positioned.
- 3. Connect the appliance to the power source.

4. Turn the "Speed Knob" to the "ON" position, and the indicators of all four buttons will illuminate solidly. Next, press the "SOUP" button, and its corresponding indicator will light up solidly while the other three buttons' indicators extinguish. Afterward, the appliance will start to work.

Alternatively, you can turn the "Speed Knob" to speed settings ranging from "Min" to "Max" to make soup at your desired speed. NOTE: The speed cannot be adjusted by the "Speed Knob" when the appliance is running under the "SOUP" mode.

NOTE:

- When the appliance is running at the speed selected by the "Speed Knob," the "SOUP" mode cannot be activated directly unless the "Speed Knob" is turned to the "ON" position.
- During the soup-making process, you can press the "SOUP" button again or turn the "Speed Knob" to the "OFF" position to stop the appliance from working.
- You can remove the measuring cup during operation to add ingredients into the jar through the center opening of the jar cover. Then replace the measuring cup.
- Do not remove the jar from the motor unit during the working process. If necessary, turn off the appliance before removing the jar.

CAUTION: A minimum 30-minute rest time must be maintained between continuous two cycles.

5. After finishing making soup, the appliance will stop working automatically. If the appliance works at your selected speed, you can turn the "Speed Knob" to the "OFF" position to stop the appliance when you achieve your desired processing result.

6. Unplug the appliance and remove the jar from the motor unit.

Carefully remove the jar cover and then pour and serve.
CAUTION: Always unplug the appliance before removing the jar.

INSTRUCTIONS FOR SMOOTHIE

- 1. Place the appliance on a flat horizontal surface and ensure it is unplugged with the "Speed Knob" turned to the "OFF" position before operating.
- 2. Put the ingredients into the jar, making sure that the amount of ingredients does not exceed the maximum level indicated on the jar. Follow the recipe below to operate.

Recipe	Ingredient
Strawberry Smoothie	Frozen strawberry: 8.82 oz Ice cube: 3.53 oz Banana: 4.23 oz Yogurt: 14.11 oz

NOTE: Never run the appliance empty.

- 3. Close the jar lid and measuring cup tightly in position. The jar lid must be securely closed, or the appliance will not activate.
- 4. Install the jar onto the jar base, ensuring that it is correctly positioned.
- 5. Connect the appliance with power source.
- 6. Turn the "Speed Knob" to the "ON" position, and the indicators of all four buttons will illuminate solidly. Then press the "SMOOTHIE" button, and its corresponding indicator will light up solidly while the other three buttons' indicators extinguish. The appliance will start to work.

Alternatively, you can turn the "Speed Knob" to speed settings ranging from "Min" to "Max" to make a smoothie at your desired speed.

NOTE:

- The speed cannot be adjusted by the "Speed Knob" when the appliance is running under the "SMOOTHIE" mode.

- When the appliance is running at the speed selected by the "Speed Knob," the "SMOOTHIE" mode cannot be activated directly unless the "Speed Knob" is turned to the "ON" position.

- During the smoothie-making process, you can press the "SMOOTHIE" button again or turn the "Speed Knob" to the "OFF" position to stop the appliance from working.

7. You can remove the measuring cup during operation to add ingredients into the jar through the center opening of the jar cover. Then replace the measuring cup.

NOTE: Do not remove the jar from the motor unit during the working process. If necessary, turn off the appliance before removing the jar.

CAUTION: Do not operate the appliance for more than 3 minutes per cycle. A minimum 30-minute rest time must be maintained between continuous two cycles.

8. After finishing making a smoothie, the appliance will stop working automatically. If the appliance makes the smoothie at your selected speed, you can turn the "Speed Knob" to the "OFF" position to stop the appliance when you achieve your desired processing result.

9. After finishing making a smoothie, the appliance will stop working automatically. If the appliance makes the smoothie at your selected speed, you can turn the "Speed Knob" to the "OFF" position to stop the appliance when you achieve your desired processing result.

10. Unplug the appliance and remove the jar from the motor unit. Carefully remove the jar cover and then pour and serve.

CAUTION: The appliance must be unplugged before removing the jar.

ICE CRUSH

- 1. Lay the appliance on a flat horizontal surface and ensure it is unplugged with the "Speed Knob" turned to the "OFF" position before operating.
- 2. Prepare ice cubes with a size of 0.59 x 0.59 x 0.59 inches Then remove the measuring cup and jar lid and put the ice cubes into the jar. Usually, a certain amount of purified water must be added to facilitate the smooth running of the appliance. The proportion of ice to water should be 2:3. The amount of mixture should not exceed the maximum level indicated on the jar. Follow the recipe below to operate.

Recipe	Ingredient	Operation
Ice crush	Solid ice cube: 8pcs, 0.59 x 0.59 x 0.59 in	Select the “Ice crush” setting to operate.

- 3. Close the jar lid and measuring cup tightly in position. The jar lid must be securely closed, or the appliance will not activate.
- 4. Install the jar onto the jar base, ensuring that it is correctly positioned.
- 5. Connect the appliance to the power source.
- 6. Turn the "Speed Knob" to the "ON" position, and all four buttons' indicators will illuminate solidly. Then press the "ICE CRUSH" button, and its corresponding indicator will light up solidly while the other three buttons' indicators extinguish. The appliance will start to work.

Alternatively, you can turn the "Speed Knob" to speed settings ranging from "Min" to "Max" to crush ice at your desired speed.

NOTE:

- The speed cannot be adjusted by the "Speed Knob" when the appliance is running under the "ICE CRUSH" mode.
- When the appliance is running at the speed selected by the "Speed Knob," the "ICE CRUSH" mode cannot be activated directly unless the "Speed Knob" is turned to the "ON" position.
- During the ice crushing process, you can press the "ICE CRUSH" button again or turn the "Speed Knob" to the "OFF" position to stop the appliance from working.

7. You can remove the measuring cup during operation to add ingredients into the jar through the center opening of the jar cover. Then replace the measuring cup.

NOTE: Do not remove the jar from the motor unit during the working process. If necessary, turn off the appliance before removing the jar.

CAUTION: Do not operate the appliance for more than 3 minutes per cycle. A minimum 30-minute rest time must be maintained between continuous two cycles.

8. After finishing crushing ice, the appliance will stop working automatically. If the appliance has crushed ice at your selected speed, you can turn the "Speed Knob" to the "OFF" position to stop the appliance when you achieve your desired processing result.

CAUTION: The appliance must be unplugged before removing the jar.

9. Unplug the appliance and then remove the jar from the motor unit. Carefully remove the jar cover, then pour and serve.

PULSE

"PULSE" mode is used for processing food at the highest speed. Activate "PULSE" mode as required. Hold and press

the "PULSE" button to keep the appliance processing food. To make the appliance stop working, release the "PULSE" button.
CAUTION: Do not operate the appliance for more than 3 minutes per cycle. A minimum 30-minute rest time must be maintained between continuous 2 cycles.

CLEANING AND MAINTENANCE

NOTE: Ensure the appliance is unplugged and the "Speed Knob" is turned to the "OFF" position.

1. To clean the blender and blade assembly easily, rapidly, and safely, follow these steps:

(1) After use, reassemble the jar and pour about 400-500ml of warm water into it.

(2) Connect the appliance to the power source, turn the "Speed Knob" to the "ON" position, and select the desired speed. The appliance will start running.

(3) When finished cleaning, turn the "Speed Knob" to the "OFF" position, and the appliance will stop working.

(4) Unplug the appliance and then remove the jar from the motor unit. Rinse the jar under running water.

2. Wipe the outer surface of the motor unit with a damp cloth. Do not use abrasive cleaners or immerse it in water or other solutions for cleaning.

3. All parts except the motor unit are dishwasher safe. You can also wash the parts (except the motor unit) in warm, soapy water.

4. Dry all parts and reassemble them. Store the appliance with the jar lid slightly open to allow air circulation and prevent odors.

5. If any issues are encountered, do not disassemble the Motor

Unit yourself as there are no user-serviceable parts inside. Contact an authorized service facility for examination and repair.

WARNING:

- The blade is very sharp. Handle it carefully when cleaning.
- Do not use abrasive cleaners and never immerse the Motor Unit in water for cleaning.

Customer Service Inquiries:
www.bergnerus.com
Los Angeles CA 90036

